



FEATURES & FUNCTIONS GUIDE

RIO

GETTING TO KNOW YOUR RIO

Congratulations On Your New Kia!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable, safe and dependable driving. Kia is committed to quality, innovation, safety and – above all – your satisfaction.

Using This Guide

The information contained in this guide will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations ensure the instructions are easy to follow.

⚠ This *Features & Functions Guide* provides an overview of vehicle operation and equipment. It is not meant as a substitute for your Owner's Manual. Your Owner's Manual contains specific information about the operation and maintenance of your Kia vehicle, including safety information, cautions and warnings that you need to know. In the interests of your safety and that of your family, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information it contains.

While the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.

CONTENTS:

Driver's Controls _____ 2

Exterior

- Double-Turn Unlocks All* _____ 02
- Key Fob/Remote Keyless Entry* _____ 02
- Fuel Cap/Check Engine Light _____ 02

Interior

- Power Windows* _____ 03
- Central Door Lock Button* _____ 03
- Power Outside Mirrors* _____ 03

Instrument Cluster _____ 4

- Warning Lights _____ 04
- Tripmeter _____ 05

Steering Wheel/Panel/ Stalk Controls _____ 6

- Instrument Panel Dimmer & Fog Lights* _____ 06
- Headlights Control & Turn Signals _____ 07
- Windshield Wiper & Washer Controls _____ 08

Center Panel Controls _____ 9

- Digital Clock _____ 09
- Parking Stub Holder _____ 09
- Rear Window Defroster _____ 09
- Audio System* _____ 10
- Climate Control _____ 11

Roof Panel Controls _____ 12

- Map/Dome Light _____ 12

Seating _____ 13

- 8-Way Manual Adjustable Driver's Seat _____ 13
- Manual Adjustable Passenger's Seat _____ 14
- 60/40-Split Folding Rear Seat* _____ 15

Safety _____ 17

- Passenger Air Bag Off _____ 17
- Child Safety Locks _____ 17


Maintenance



The Power to Surprise™


*If equipped.

Always check the Owner's Manual for complete operating information and safety warnings.

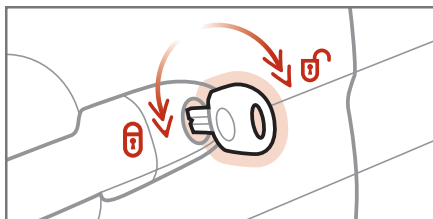

Double-Turn Unlocks All*

Unlock all doors and rear hatch by turning the key toward the rear of the vehicle **twice** within 3 seconds. Turn toward the front of the vehicle once to relock all doors.

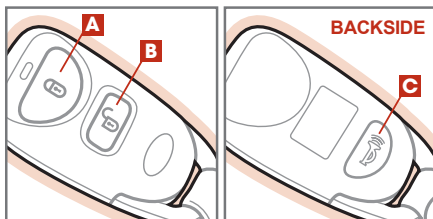


Key Fob/Remote Keyless Entry*

Lock: Press the lock button **B** to lock all doors.

Unlock: Press the unlock button **A** once to unlock the driver's door, twice within 3 seconds to unlock all doors.


NOTE: If doors are not opened, they will automatically relock after 30 seconds.

Panic: Press the panic button **C** for longer than 1 second. Press again to stop panic mode.

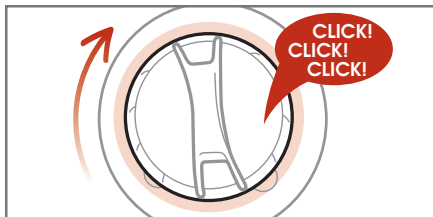

Fuel Cap/Check Engine Light


Tighten cap at least **3 clicks** or more, otherwise the 'Check Engine' light in the instrument cluster may illuminate, requiring you to securely tighten the cap.

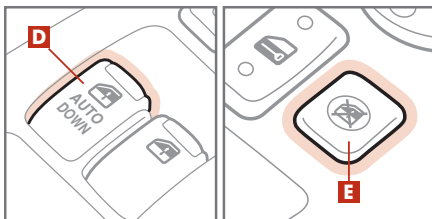

Power Windows*

Auto Down: Press power window switch **D** to second detent position and release to completely lower the window. Press again momentarily to stop.

Lockout Switch **E:** Located on driver's door panel, press to disable passenger's power windows.

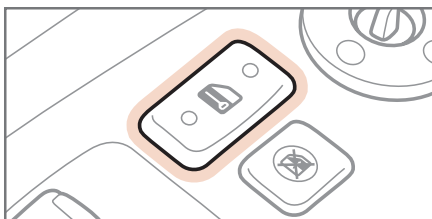


Central Door Lock Button*

Located on driver and passenger door panels, press the front portion of this button to lock all doors, press the rear portion to unlock all doors.

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

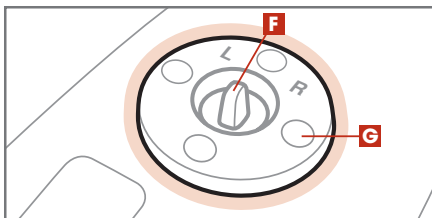


Power Outside Mirrors*

Move the mirror selection switch **F** to the L or R position for the left or right mirror and use the mirror adjusting control **G** to select the desired position.

*If equipped.

Always check the Owner's Manual for complete operating information and safety warnings.

Warning Lights: The warning lights and indicators alert you to situations that may need attention. Refer to your Owner's Manual for more information on the function of all the warning lights.

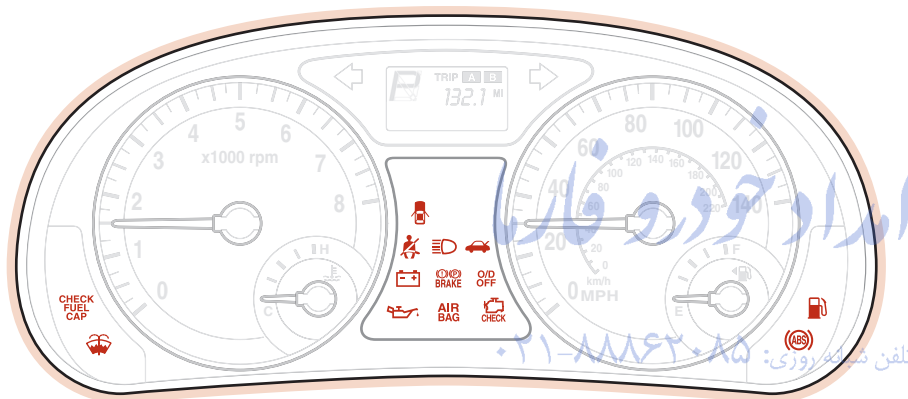

CHECK FUEL CAP – **Check Fuel Cap:** The fuel cap is not fully tightened.

Low Washer Fluid: The washer fluid tank is nearly empty.

Door Ajar: One of the doors is not fully closed.

Safety Belt Warning: Driver's safety belt is not fastened.

High Beam Indicator: High beam lights are on.

Trunk Lid Open: The trunk lid is not fully closed.

Charging System Warning: The electrical system is malfunctioning.

Oil Pressure Warning: Indicates low oil pressure.

Air Bag Warning: Air bag system is malfunctioning.

Check Engine: May indicate a problem with the emission system or A/T.

Low Fuel: There are approximately 1.7 gallons of fuel remaining.



ABS Warning: Indicates a potential problem with the Anti-lock Brake System. Brake lining may occasionally squeak, that is normal.

Parking Brake/Fluid Warning: Fluid level is low. Parking brake is "ON."

O/D Off: The Overdrive System is disabled by pressing button on shifter.


INSTRUMENT CLUSTER

- A Tachometer:** The tachometer indicates number of engine revolutions per minute.
- B Engine Temperature Gauge:** This gauge shows the temperature of the engine coolant. If the needle nears the “H” position on the gauge, it indicates an overheating engine. Do not drive your vehicle in this condition.
- C Turn Signal Indicators:** The indicators will illuminate when the turn signal control is engaged.
- D Shift Pattern Indicator:** Indicates shift lever selection. (Automatic Transaxle only).
- E Odometer:** The odometer indicates the total distance the vehicle has been driven.
- F Speedometer:** Indicates speed of vehicle.
- G Fuel Gauge:** Displays approximate amount of fuel remaining in the vehicle.
- H Tripmeter:** The tripmeter can record individual trip distances for up to two different trips (A or B). The tripmeter button (located to the left of the steering wheel column) will reset the meter to “0” if pressed longer than one second.

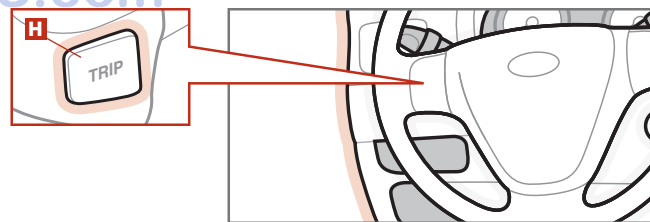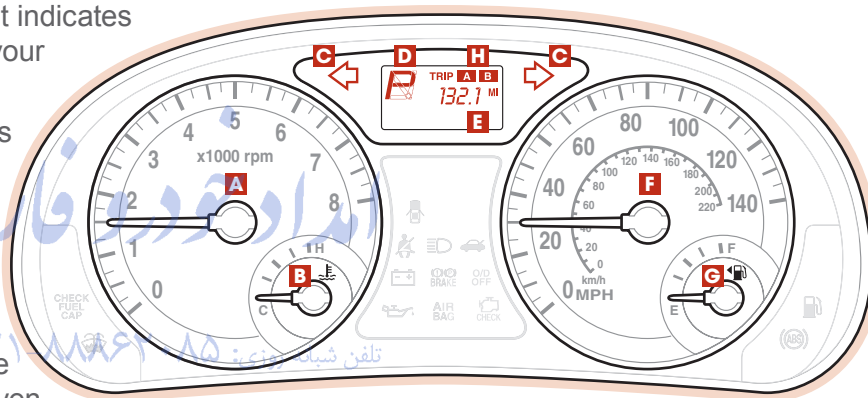

*If equipped.

Always check the Owner's Manual for complete operating information and safety warnings.

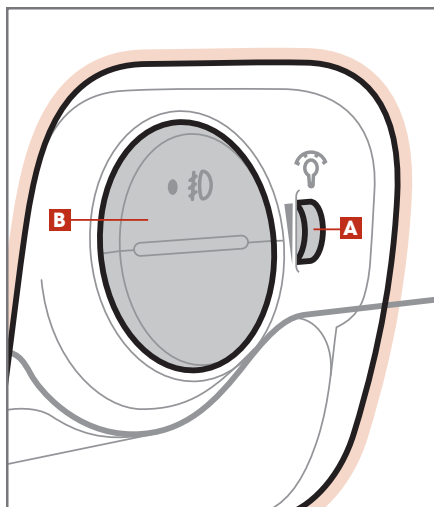

Instrument Panel Dimmer


The Instrument Panel Dimmer **A** is located to the left of the steering column. When the parking lights or headlights are on, rotate the control knob to adjust the instrument panel display brightness to the desired level.

Fog Lights*

To turn the fog lights on, press the fog light button **B** with the headlights on. To turn off, press the button again. Use the fog lights for improved visibility in inclement weather.

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

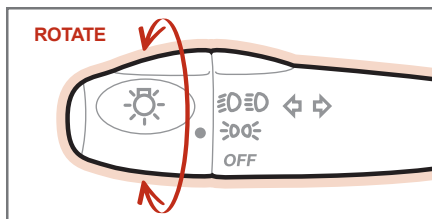


Headlights Control & Turn Signals

Light Control: Turn the knob at the end of the control stalk to the desired position:

OFF – Exterior lights off

 – Parking lights on

 – Headlights on

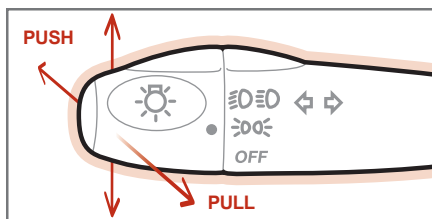

High Beams: Push the control stalk away from you. Pull it back to revert to low beams.


Turn Signals: Move stalk control up to signal a right turn, or down to signal a left turn.

تلفن شبانه روزی: ۰۵۱-۸۸۷۴۱۱۱

FarmaSOS.com

*If equipped.

Always check the Owner's Manual for complete operating information and safety warnings.

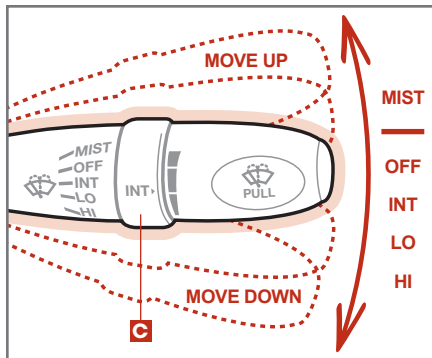

Windshield Wiper & Washer Controls


MIST: Push the lever up and release for a single wipe, or hold for continuous operation.

OFF: Wiper is not in operation.

INT: Wiper operates intermittently. To vary the speed, rotate the control ring **C**.

LO: Normal wiper speed.


HI: Fast wiper speed.

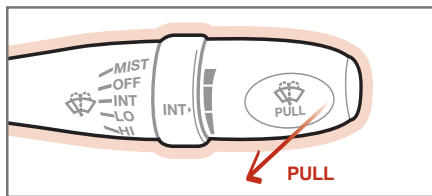

Windshield Washer:

Pull control stalk toward you, hold for continuous spray and wipe.


FarmaSOS.com

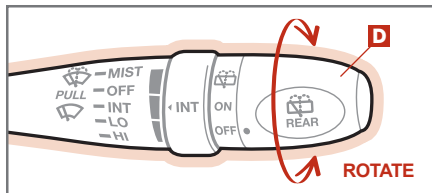

Rear Windshield Wiper/Washer*

Rotate the switch **D** to the desired position (SPRAY, ON or OFF) to operate the rear wiper and washer.

CENTER PANEL CONTROLS

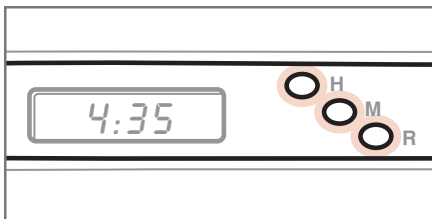


Digital Clock

HOUR: Press “H” to advance the time displayed by one hour.

MINUTE: Press “M” to advance the time displayed by one minute, or hold to rapidly advance.

RESET: Press “R” to clear away minutes and set to the nearest hour.

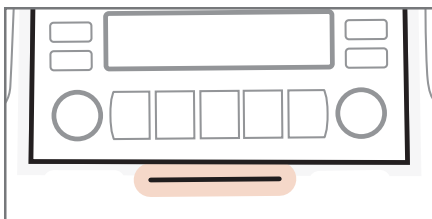

Parking Stub Holder


Use to hold parking stubs and toll stubs in an easily accessible spot.

امداد خودرو فارما
تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

Rear Window Defroster


With the engine running, press to whisk away condensation, snow and ice from the rear window. The defroster automatically turns off after 20 minutes or at engine shut-off.

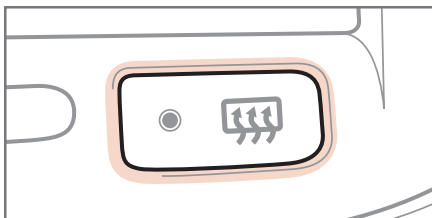

*If equipped.

Always check the Owner's Manual for complete operating information and safety warnings.

CENTER PANEL CONTROLS

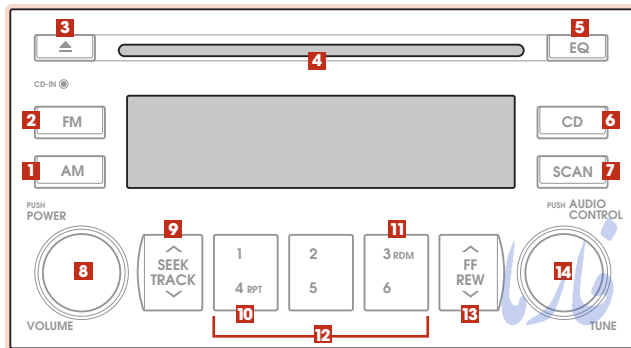


AM/FM/CD AUDIO SYSTEM*

- 1** Press to switch to radio and select AM mode.
- 2** Press to switch to radio and select FM1, FM2 modes.
- 3** Press to eject a CD, or hold to forcibly eject a jammed CD.
- 4** Insert a CD to automatically begin playback.
- 5** Press to select CLASSIC, POP, ROCK, JAZZ, and OFF modes for the desired tone quality.
- 6** Press to play a CD.

- 7** Plays 5 seconds of each station in radio mode, first 10 seconds of each track in CD mode.
- 8** Press to turn the system On or Off, rotate the knob clockwise to increase or counterclockwise to decrease the volume.
- 9** Press $\wedge/\vee$ for the next highest/lowest channel in radio mode or for the next/previous track in CD mode.
- 10** Press once to repeat playback on the current track or hold to repeat playback in CD mode.
- 11** Press for randomized selection of tracks within the CD in CD mode.
- 12** Press and hold the corresponding preset button (1-6) until you hear an audible beep to store a station in memory.
- 13** In CD mode, press and hold to fast-forward/rewind through the current track.
- 14** In radio mode, turn the knob clockwise to increase or counterclockwise to decrease the frequency. To adjust the audio controls (BASS, TREBLE, etc.), rotate the knob accordingly.

NOTICE: Forcing the CD into the slot may damage the player.

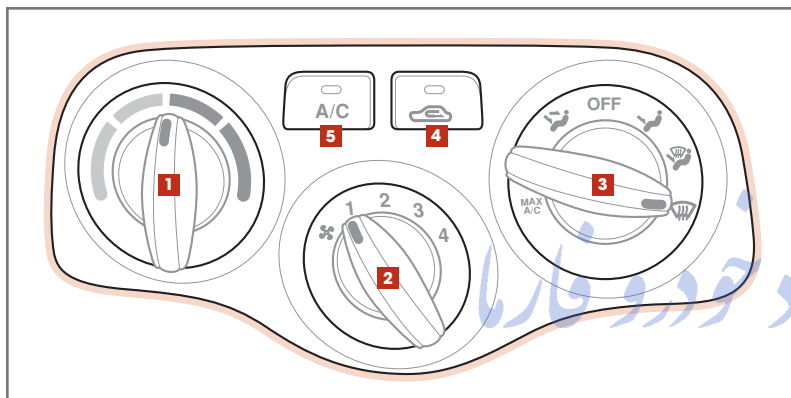

Climate Control

- 1** Temperature Control Knob
- 2** Fan Speed Control Knob
- 3** Mode Selection Control Knob
- 4** Air Intake Control Button
- 5** Air Conditioning Button*

Windshield Defogging/Defrosting

-  **Defrost** – Turns the defroster function ON and OFF


Manual system functions to operate defrost:

1. When defrost mode  is selected A/C is operational, fresh air vent is open, although A/C lamp is off.
2. Set fan speed **2** to maximum.
3. Set temperature **1** to hot.
4. Select the Defrost .

NOTE: When defrost is selected, outside fresh air and air conditioning are activated automatically, this will further reduce window fogging.

NOTE: In defrost mode some moisture may be visible on the windshield during cool A/C operation. To eliminate this effect adjust Temperature Control Knob **1** as desired. This condition happens more at night and on cloudy days. Keep inside glass as clean as possible to help reduce window fogging.

Always check the Owner's Manual for complete operating information and safety warnings.

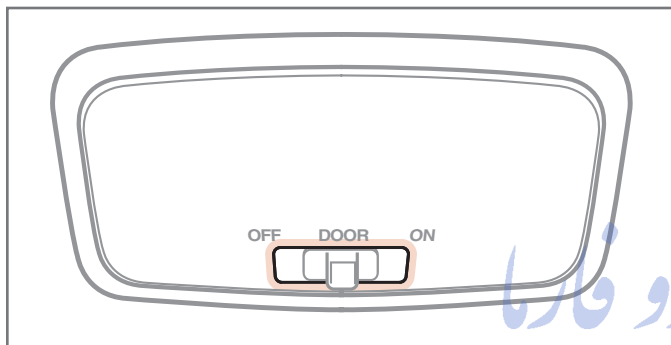


Map/Dome Light

Set switch to OFF position to keep map/dome light off, or set to ON position to keep map/dome light on. In the DOOR position, dome light will come on when a door is opened and go off when all doors are shut.

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

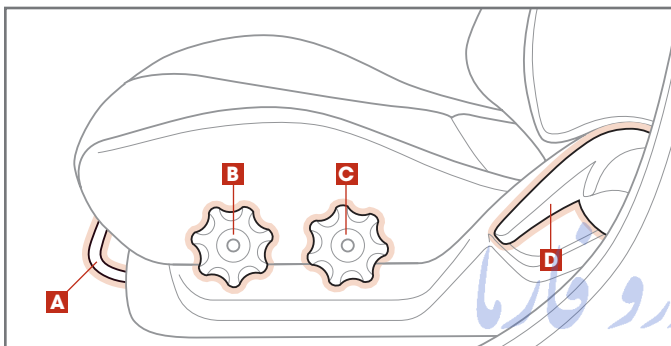

8-Way Manual Adjustable Driver's Seat

Adjusting the Seat Forward and Backward:

1. Pull up on the seat slide adjustment lever **A** under the seat cushion and hold it.
2. Slide the seat until the desired position is attained.
3. Release the seat slide adjustment lever **A** and make sure the seat is locked in place.

Front Cushion Height Adjustment:

To raise: Rotate the knob **B** clockwise.

To lower: Rotate the knob **B** counterclockwise.

Rear Cushion Height Adjustment:

To raise: Rotate the knob **C** clockwise.


To lower: Rotate the knob **C** counterclockwise.

Seat Recline Adjustment:

1. Lean forward slightly and pull up on the seatback recline lever **D**.
2. Lean back on the seat until the desired position is attained.
3. Release the seatback recline lever **D** and make sure the seat is locked in place.

WARNING: Adjusting the driver seat with the vehicle in motion could cause loss of control and a serious accident.

Always check the Owner's Manual for complete operating information and safety warnings.

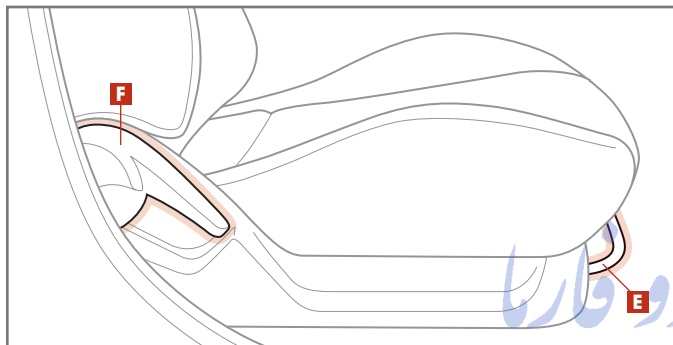




Manual Adjustable Passenger's Seat

Adjusting the Seat Forward and Backward:

1. Pull up on the seat slide adjustment lever **E** under the seat cushion and hold it.
2. Slide the seat until the desired position is attained.
3. Release the seat slide adjustment lever **E** and make sure the seat is locked in place.

Seat Recline Adjustment:

1. Lean forward slightly and pull up on the seatback recline lever **F**.
2. Lean back on the seat until the desired position is attained.
3. Release the seatback recline lever **F** and make sure the seat is locked in place.

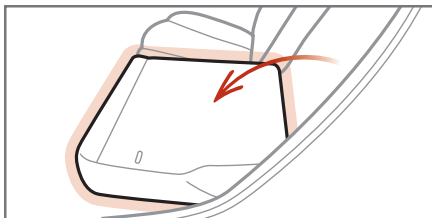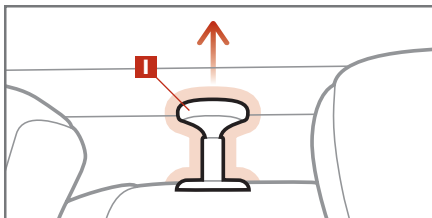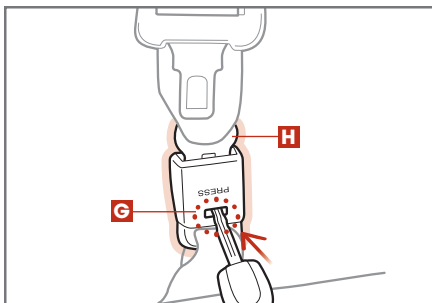

60/40-Split Folding Rear Seat*

Folding the Rear Seat (4-door):




1. Set the front seatbacks to the upright position and slide the front seats forward.
2. Lower the rear seat headrests to the lowest position.
3. Insert the key into the rear center seatbelt web release button **G**.
4. Pull up on the seatbelt web **H** and let the webbing retract automatically.
5. Pull up on the lock release lever **I** located at the top of the rear seatback.
6. Move the seatbelt so it's clear of the seatback.
7. Fold the seatback forward and down firmly.

Unfolding the Rear Seat (4-door):

1. Make sure the rear center shoulder belt is clear of the seatback.
2. Lift the seatback up and firmly lock it into place.
3. Return the rear seat belts to their proper positions.
4. Reattach the seatbelt web **H** to the anchor connector.

*If equipped.

Always check the Owner's Manual for complete operating information and safety warnings.

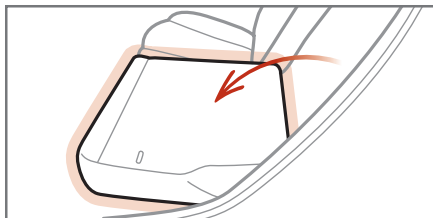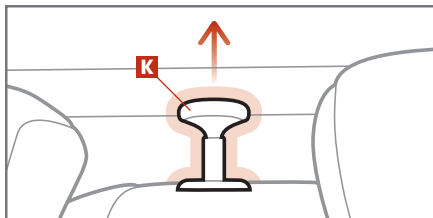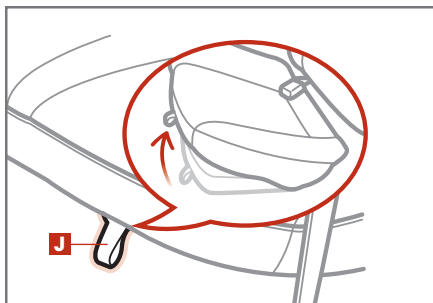


60/40-Split Folding Rear Seat*

Folding the Rear Seat (5-door):

1. Set the front seatbacks to the upright position and slide the front seats forward.
2. Pull up on the cushion retaining strap **J** located underneath the rear seat cushion.
3. Lift the front of the seat cushion.
4. Lift the rear of the seat cushion and pull it forward firmly into place.
5. Remove the rear headrests.
6. Pull up on the lock release lever **K** located at the top of the rear seatback.
7. Fold the seatback forward and down firmly.

Unfolding the Rear Seat (5-door):

1. Make sure the rear center shoulder belt is clear of the seatback.
2. Lift the seatback up and firmly lock it into place.
3. Reinsert the headrests into the rear seatbacks.
4. Push the rear seat cushion toward the rear of the vehicle and down firmly.
5. Return the rear seat belts to their proper positions.

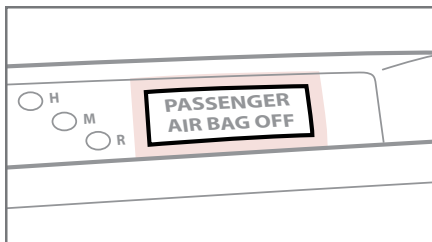


Passenger Air Bag Off

If there is no passenger or the adult passenger is small or out of position, the front PASSENGER AIR BAG OFF indicator may turn ON. When this indicator is ON, the front passenger's air bag will not operate.

Please refer to your Owner's Manual and the separate brochure entitled "Your Safety is Important to Kia" for more detailed information regarding your vehicle's air bags.

WARNING: Always properly restrain children in the rear seat of your vehicle. Seat covers must NOT be used because they can affect how the system operates.

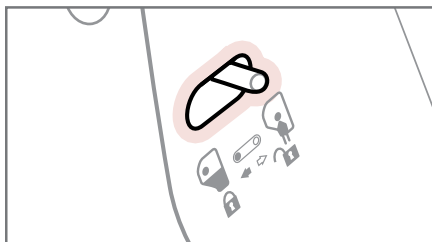

Child Safety Locks

Located on the rear edge of the door, push the child safety lock to the "lock" position to disable the inner door handles from opening the rear doors. ***WARNING: To prevent a child from opening rear doors from the inside, rear door safety locks should be activated whenever children are in the vehicle.***

*If equipped.

Always check the Owner's Manual for complete operating information and safety warnings.

PROTECT YOUR WARRANTY BY PERFORMING THIS REQUIRED MAINTENANCE

7,500 miles	A	B							
15,000 miles	A	B	C	D					
22,500 miles	A				E				
30,000 miles	A	B	C			F	G		
37,500 miles	A	B						H	
45,000 miles	A		C	D	E				
52,500 miles	A	B							
60,000 miles	A	B	C			F			I
67,500 miles	A				E				
75,000 miles	A	B	C	D				H	
82,500 miles	A	B							
90,000 miles	A		C		E	F	G		
97,500 miles	A	B							
105,000 miles	A	B	C	D					

A Change: Engine oil, engine oil filter

Inspect*: Vacuum and crankcase ventilation hoses, fuel tank, cap, lines and hoses, disc brakes and pads, drum brakes and linings**, power steering fluid, steering operation, linkage and hoses, drive belts, tire tread, drive shaft and boots

Lube: Locks and hinges

B Inspect*: Air cleaner element

C Inspect*: Manual transaxle fluid**, auto transaxle fluid**, battery condition, brake lines, hoses and connections, parking brake, exhaust pipe and muffler, brake/clutch** fluid

D Inspect*: Fuel tank air filter

E Replace*: Air cleaner element

F Replace: Spark plugs, fuel tank air filter

Inspect*: Front suspension joints, chassis nuts and bolts

G Inspect*: Engine timing belt

H Replace: Fuel filter

I Replace: Timing belt

*and, if necessary, adjust, clean, replace or correct.

**if equipped

Rotate tires every 7,500 miles or sooner if needed.

Check tire pressure monthly.

Replace climate control air filter every 10,000 miles.

Replace engine coolant at 60,000 miles then replace every 30,000 miles.

Warranty may be voided if maintenance schedule is not followed. See your local Kia retailer for factory trained technicians and genuine Kia parts.

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule.

Call 1-800-333-4KIA (4542) for Roadside Assistance.



The Power to Surprise™

Part Number: UR070-PS-004
Kia Rio Features & Functions Guide
© 2006 Kia Motors America, Inc. All rights reserved.



The Power to Surprise™

RIO FEATURES & FUNCTIONS GUIDE SURVEY

Please take a moment to complete and submit this evaluation of the Kia Rio Features & Functions Guide and your Delivery experience. Your feedback is an important contribution to the continuous improvement of our resources so they better meet your future consumer needs. No postage required.

Dealer Ship Name: _____ (Please print) State: _____ (Please print)

Sales Consultant's Name: _____ (Please print) Vehicle Model Year: _____ (Please print) Date: _____ (Please print)

I. Features & Functions Guide

A. Please answer the following questions from 1-5, 1 = Strongly Disagree, and 5 = Strongly Agree.

	Strongly Disagree	Disagree	Neutral	Agree	Strongly Agree		YES	NO
This guide was well-organized and easy to use.	1	2	3	4	5	1. Did your Sales Consultant explain the Kia Delivery First Promise to you?	YES	NO
This guide clearly explained the operation of the features and controls.	1	2	3	4	5	2. Did your Sales Consultant provide you with Pre-Delivery Inspection and Walkaround Checklists?	YES	NO
This guide covered features and controls that are important to me.	1	2	3	4	5	3. Did you receive a thorough Delivery Product Presentation from your Sales Consultant?	YES	NO

If yes, how long was your Delivery Product Presentation?

If yes, was the Delivery Product Presentation: ☐ Just the right amount of time

☐ Too Long

☐ Not Long Enough

B. Please answer YES or NO to the following questions, by circling YES or NO.

	YES	NO
Do you plan on using this guide as a quick reference tool?	YES	NO
Did your Sales Consultant utilize this guide during your Delivery Product Presentation?	YES	NO
Did your Sales Consultant have extensive knowledge of the topics covered on this guide?	YES	NO

THANK YOU!

WE APPRECIATE YOUR RESPONSES!

Safety

Seating

Roof Panel Controls

Center Panel Controls

Steering Wheel/ Panel/Stalk Controls

Instrument Cluster

Driver's Controls



KIA UNIVERSITY

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST-CLASS MAIL PERMIT NO 71-000 ROCHESTER HILLS MI

POSTAGE WILL BE PAID BY ADDRESSEE

**KIA UNIVERSITY
2044 AUSTIN
ROCHESTER HILLS, MI 48309-9871**

